

X-TYPE



QUICK START GUIDE

Some of the information in this guide may not apply to your vehicle. You must refer to your Owner's Handbook for full operating instructions.

Vehicle access and Clock adjustment

Locking and unlocking

Dependent upon specification and vehicle configuration, the operation of the remote handset may differ from the following.

Remote handset








Unlocking with the door key

If the vehicle is unlocked manually via the door lock, the key must be inserted in the starter lock within 15 seconds to prevent the alarm being activated.

Unlocking mode alternatives

Single stage unlocking will unlock the vehicle with a single press. Two stage unlocking will unlock the driver's door and luggage compartment with a single press and all other doors with a second press.

To change between modes, press and hold the lock and unlock buttons for four seconds. The direction indicators will flash twice to confirm the change.

-  • Press to release door key.
-  • Press once to lock the vehicle and arm the alarm.
- Press twice within three seconds to double lock the vehicle.
- Press and hold to close the sunroof and any open windows (**Global closing**).
-  • Press once to disarm the alarm, unlock the driver's door and unlock the luggage compartment.
- Press again to unlock remaining doors.
- Press and hold to open the sunroof and windows (**Global opening**).
-  • Press once to switch the headlamps on for 25 seconds.
-  • Press to unlock and open luggage compartment.

Central door locking

 
To lock all doors, press the lock lever on either of the front doors.

To unlock all doors, pull the lock lever on either of the front doors.

Drive away door locking


The doors and luggage compartment will automatically lock when the vehicle's forward speed exceeds 7 km/h (5 mph).

This feature can be disabled by your Dealer/Authorised Repairer.

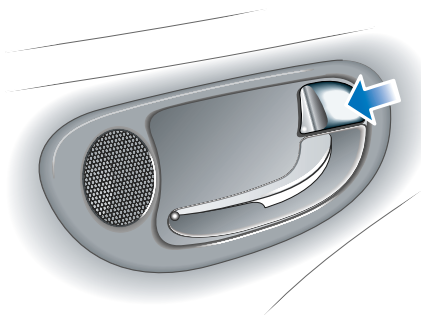

Luggage compartment

The luggage compartment is electrically locked and unlocked in conjunction with the driver's door.

 To open the luggage compartment with the vehicle locked, press the luggage compartment button on the remote handset.

 
To open the luggage compartment with the vehicle unlocked, press the release button **1** on the luggage compartment lid/tailgate.

Tailgate glass - Estate

To open the tailgate glass, press the release button **2**, located on the reverse of the tailgate handle and lift the glass.

Care Point

- The release button on the luggage compartment lid/tailgate is disabled when the vehicle is alarmed.

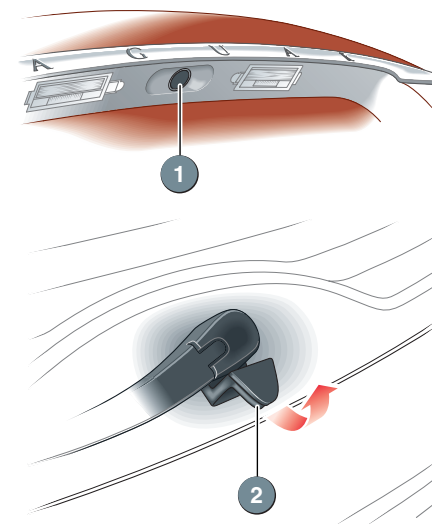


Clock adjustment

Touch-screen

1. Press the **MENU** button on the touch screen surround to access the **MENU** screen.
2. Touch System Setup to access the **SYSTEM SETUP** screen
3. Touch the **Set Clock** icon.
4. Adjust the time by touching the hour and minute up or down arrow icons.
5. Touch the **12/24** icon to select between 12 or 24 hour display.
6. Touch **Set** to confirm your new settings.



 Non-touch-screen

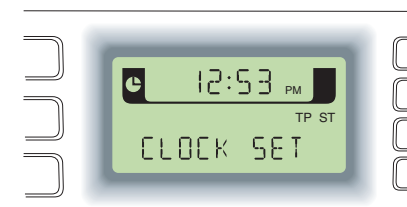


1. Press and hold the Audio **MODE** button until **TA VOLUME** is displayed.
2. Repeatedly press and release the **MODE** button until **CLOCK SET** is displayed.
3. Press the seek up/down keys to select either 12 or 24 hour format and press the **MODE** button to continue.
4. If 12 hour is selected, use the # key to denote **AM** or **PM**.
5. Enter the time in four-digit format using the key pad.
6. To exit, press and hold the **MODE** button until the display reverts to audio mode.

Comfort adjustments


Seats

 Manual seat adjustment

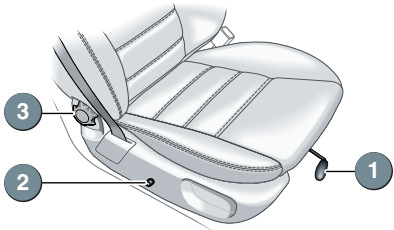


1. Seat fore/aft lever. Lift and slide to position.
2. Seat height switch.
3. Seat back angle wheel.

 4-way electrical seat adjustment

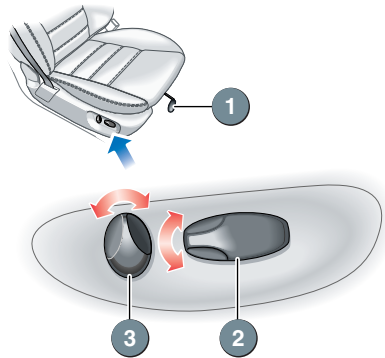

1. Seat fore/aft lever. Lift and slide to position.
2. Seat height switch.
3. Seat back angle switch.

 10-way electrical seat adjustment

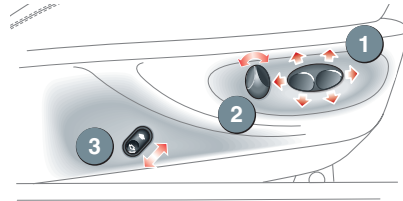


1. Seat position switch. Controls fore/aft position and front and rear cushion height.
2. Seat back angle switch.
3. Lumbar support switch.

Passenger seat

If the passenger seat is fitted with only 2-way electrical adjustment, switch **3** adjusts the seat back angle.

 Electrical seat adjustment - memory seats

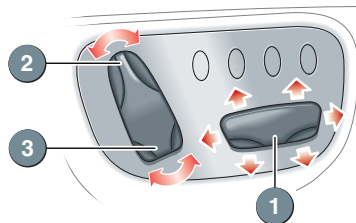


1. Seat position switch. Controls fore/aft position and front and rear cushion height.
2. Seat back angle switch.
3. Lumbar support switch.

Steering column lock/adjustment

Push steering column adjustment lever downwards.

 Move the steering wheel to the required position, then fully raise the lever to lock steering column in position.

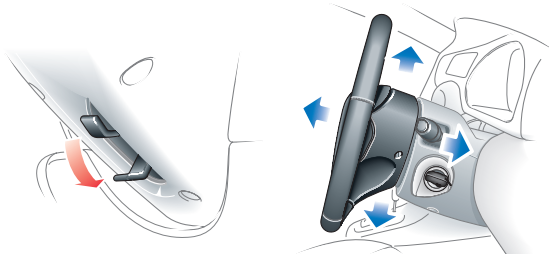

Windows/Door mirrors

 
Windows

The windows can be fully opened or closed with a single operation of the switch.

- To open a window, fully press the respective switch. Press the switch again to stop the window from fully opening.
- To close a window, pull the switch fully upwards. Pull the switch again to stop the window from fully closing.

To partially open a window, lightly press the appropriate switch and release when the window reaches the required position.

Press button **1** to inhibit the operation of the rear window switches.

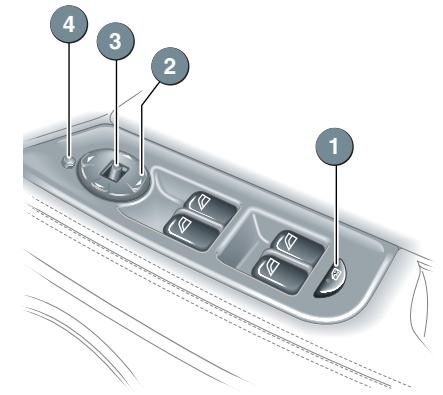

Door mirrors

Select the appropriate mirror using selector switch **3**. Use the four-way switch **2** to adjust the position of the mirror glass.

 
Power fold mirrors (when fitted)

The mirrors can be folded towards the door for better clearance/protection. With the starter switch in position **I** or **II**, press button **4** to fold the mirrors. A second press returns the mirrors to their normal position.

Reminder - Global closing

If a window has been left open when leaving the vehicle, it can be closed by pressing and holding the lock button on the remote handset (this will also close the sunroof).

Driving position memory

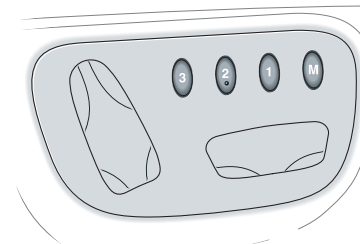

1. With the starter switch in position **I** or **II**, press the **M** button on the driver's seat switchpack. A chime will sound to indicate the seat is in memory mode.
2. Within five seconds, press button **1**, **2** or **3** to memorise the current settings.

A double chime will sound to confirm that the settings are memorised. Any existing settings will be over-written.

To recall a memorised driving position, press button **1**, **2** or **3**. This feature will only operate if the automatic transmission is in **P** (Park) or **N** (Neutral), or the starter switch is off in vehicles with manual transmission.

Once you have adjusted the driver's seat and exterior mirrors for your ideal driving position, the vehicle can memorise these settings for future use.

Electrochromatic rear view mirror (when fitted)

With the starter switch on, the rear view mirror will automatically darken to counteract glare from the headlamps of a following vehicle.

When enabled this feature is automatically switched off when reverse gear is selected.


Operating note

This feature is enabled, when the button on the underside of the mirror is depressed.

Comfort adjustments

Seat belts/Child restraints

The use of front and rear seat belts is mandatory in most countries. **Using seat belts saves lives.** They should be worn by all occupants whenever the vehicle is in use.

 A warning indicator on the instrument pack will illuminate to alert you that the driver's and/or front passenger's seat belt is unbuckled. Dependent upon specification this may be accompanied by an intermittent chime.

Child Seats

It is important to remember that your child's weight, rather than age, determines the type of seat that is required.

Refer to **Child Safety** in the Owner's Handbook to determine the correct seat for your child.

Automatic Locking Reels (ALR) (when fitted)

Passenger seat belts have ALR fitted for use with child seats.

 
- To engage: extend the belt to maximum length to enable locking mechanism.
- To disengage: unbuckle the belt and allow belt to fully retract.

Rear centre seat belt interlock - Estate only

The centre rear seat belt is anchored to the back of the seat. If the seat backrest is not correctly latched, the seat belt reel will not extend.

With ALR enabled, as the seat belt retracts, it will automatically lock preventing re-extension. Ensure passengers do not fully extend the restraints and inadvertently engage this feature during normal use.

Overhead console

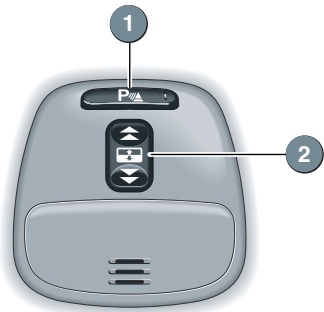

Parking assist

Press button **1** to turn on/off the front and rear parking sensors. An indicator will illuminate in the switch when the system is turned on.

Parking assist care points

Sensors may activate on detection of water, snow or ice on their surface. This is entirely normal and regular cleaning will aid performance.

Parking assist may sound if it detects a signal operating at the same frequency to that of the sensors (e.g. Motorcycles, Airbrakes).

Sunroof

The sunroof is fitted with a facility that allows it to be fully opened or closed with a single operation of switch **2**.

Closing remotely

If the sunroof has been left open when leaving the vehicle, it can be closed by pressing and holding the lock button on the remote handset.

Climate control

These are the primary functions of the climate control system.



For those vehicles fitted with the touch screen navigation system, the advanced climate control functions can be accessed by pressing the **CLIMATE** button.

AUTO (automatic) mode



Press to select automatic operation of the climate control system. The system will automatically adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) and reduce misting without constant adjustments by the driver or passengers.

Screen heaters and timed air recirculation may be selected whilst in **AUTO** mode. Selecting any other function will cancel **AUTO** operation.

Recommended mode

Select **AUTO** as the normal operating mode. This will help prevent window misting and odours from the climate control system.

Air conditioning (A/C)



Air conditioning is an integral part of the climate control system, providing cooled and dehumidified air for occupant comfort; the dry airflow is also effective in preventing misting of the windows.

Press button to switch the air conditioning system on or off.

Air recirculation



Air recirculation is used to stop outside odours from entering the vehicle or to improve performance of the air conditioning system in regions of high ambient temperatures.

Press button to switch timed air recirculation system on or off.



Temperature selection



Press the red buttons to increase temperature and the blue buttons to decrease temperature.

To quickly jump from **HI** or **LO** to a mid range temperature setting, press and hold the **AUTO** button for a few seconds.

External water deposits

The air conditioning system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.

Defrost/demist mode



Press the **DEF** button to remove frost or heavy misting from the windscreen. The rear screen and windscreen heaters will be activated.

To deselect defrost mode, press **AUTO**. The rear screen and windscreen heaters will remain on.

Heated screens and door mirrors



The front and rear screen heaters can be switched on or off in any mode, even when the climate control system is off, but will only operate when the engine is running.



The door mirror heaters are controlled by the rear screen heater button.

 
Screen heaters

Front and rear screen heaters will automatically activate on operation of the **DEF** button.

Exterior lamps/Trip computer

Move the stalk up or down to activate the direction indicators.

Pull the stalk to the first position and release to flash the headlamps. Pull the stalk to the second position and release to switch on the main beam. To switch off the main beam, again pull the stalk to the second position and release.

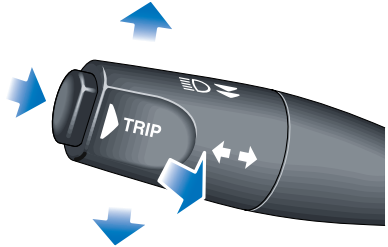

Press the button on the end of the stalk to cycle through trip computer displays.

 
Wipers and washers

- A Intermittent wipe.
- B Low speed operation.
- C High speed operation.

Press the button for windscreen wash/wipe.


Pull the stalk to operate the rear wash/wipe (if fitted).

Rotate the collar to adjust speed of intermittent wipe or to select **AUTO** for automatic operation of wipers (if fitted).

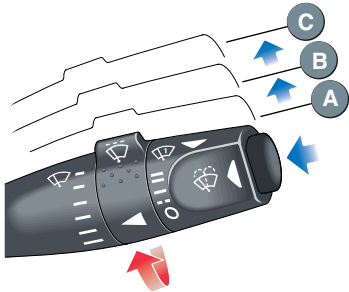

Enabling automatic operation

 The wiper stalk must be in position **A** and **AUTO** selected on the collar to enable automatic operation of the wipers.

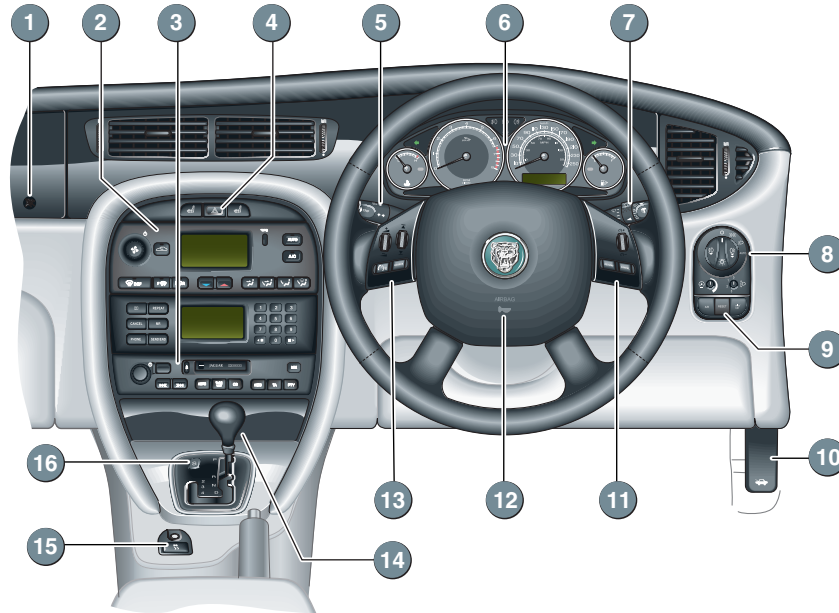

- 1 Passenger airbag deactivation indicator
- 2 Heating and ventilation system
- 3 Audio system
- 4 Hazard warning switch
- 5 Direction indicators/trip computer switch
- 6 Instrument pack/warning indicators
- 7 Wiper/washer switch
- 8 Lamps master switch
- 9 Trip computer reset switch
- 10 Bonnet release
- 11 Cruise control switches
- 12 Horn
- 13 Audio switches
- 14 Gear selector lever
- 15 Dynamic Stability Control (DSC) switch
- 16 Sports mode button

Passenger airbag deactivation indicator



The front passenger seat is fitted with an occupancy sensor system that determines the state of seat occupancy and sets the airbag status to suit;

 
- Seat unoccupied - airbag deactivated and indicator off.
- Seat occupied - airbag activated and indicator off.
- Seat occupied by a child, child seat or low weight object - airbag deactivated and indicator on.
- Passenger too close to airbags - airbag deactivated and indicator on.

For further information, refer to **Occupant Protection** in the Owner's Handbook.

Warning indicators

- Low oil pressure
- Battery charge indicator
- Seat belt reminder
- Handbrake on/brake fluid low
- Transmission malfunction detected
- Anti-lock braking system
- Engine malfunction detected
- Dynamic Stability Control (DSC) off
- Door/luggage compartment open
- Airbag system fault detected
- Diesel glow plugs active/malfunction
- Low washer fluid level
- Sidelamps on
- Headlamp main beam on
- Front fog lamps on
- Rear fog lamps on
- Direction indicator
- Cruise control active
- Low outside temperature

Lamps master switch

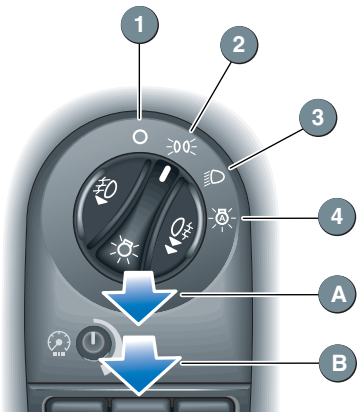

- | | |
|---------------------|---------------------------|
| 1. Off | A. Front fog lamps |
| 2. Sidelamps | B. Rear fog lamps |
| 3. Dipped headlamps | Pull switch to operate. |
| 4. Autolamps | |

Autolamps

If Autolamps is selected, a sensor monitors the exterior light levels and will automatically switch the sidelamps and dipped headlamps ON and OFF. With Autolamps selected, if the windscreen wipers are operated continuously for more than 20 seconds, then the exterior lamps will be switched ON automatically.

Fog lamps cannot be activated when Autolamps is selected.

Transmission

Gearshift interlock

The starter switch must be in position **II** and the foot brake applied before the gear selector can be moved from **P** (Park) to **R** (Reverse).

 
The lever can be moved into **P** with the starter switch off.

Gear selector

The J-gate gear selector lever is designed to accommodate two different driving techniques as follows:

- Automatic selection: the right-hand side of the selector gate.
- Manual selection: the left-hand side of the selector gate to individually select 4th, 3rd or 2nd gear.

After selecting **R** (Reverse) or **D** (Drive) from **N** (Neutral) or **P** (Park), wait briefly for the transmission to engage before accelerating.

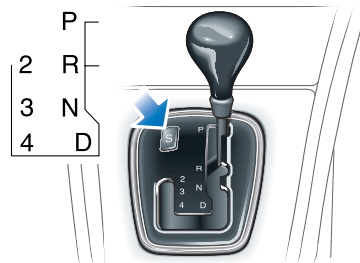

Sports mode

Press the switch (arrowed) to select sports mode. A red indicator in the switch will illuminate to indicate that sports mode is active. When sports mode is selected, the gear change points are modified to make full use of the engine's power.

With the gear selector in **D** (Drive) and Sports mode active, the transmission will use 5th gear less at higher cruising speeds. Fuel consumption will be adversely affected.

 
Cruise (speed) control

The cruise control system will maintain a set road speed until either cruise control is cancelled or the brake or clutch pedal is used.

The system is controlled via switches on the steering wheel:

1. **SPEED ADJUSTMENT WHEEL** - to engage cruise control initially. Also use to increase/decrease the set speed
2. **RESUME** - to resume a set speed retained in memory.
3. **CANCEL** - cancels cruise control but retains the set speed in memory.

When the vehicle is accelerated above the set speed, cruise control cancels, but resumes when the vehicle slows down to the set speed. the message **CRUISE CANCELLED** or **CRUISE ENGAGED** appears in the message centre to indicate the status of the system.

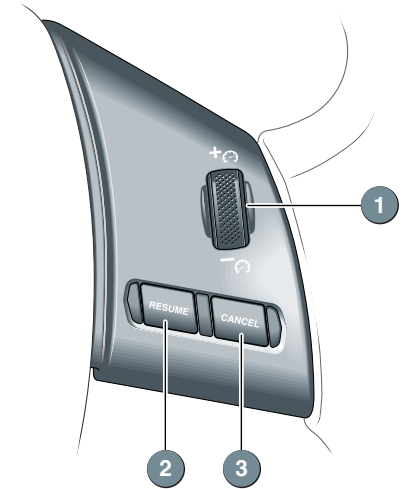

Operating note

 
Cruise control will automatically disengage when the vehicle speed falls below 28 km/h (18 mph).

Dynamic Stability Control (DSC)

DSC uses traction control and anti-lock braking systems to maximise the vehicle's handling performance and help prevent wheelspin.


DSC is automatically activated when the starter switch is turned to position **II**, but can be turned off by pressing the button on the centre console. An amber indicator in the instrument pack will permanently illuminate whenever DSC is switched off.

In the event of a system fault, the message **STABILITY CONTROL FAULT** will also be displayed in the message centre.

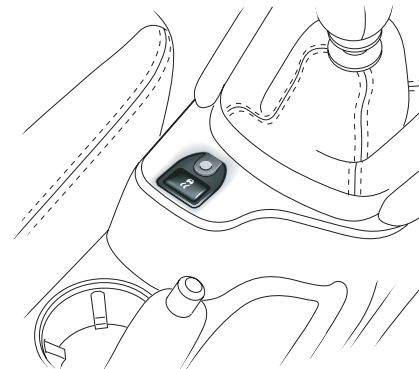

Depending on the audio system specification, a single CD, MiniDisc (MD) or cassette player is fitted.

 Key features

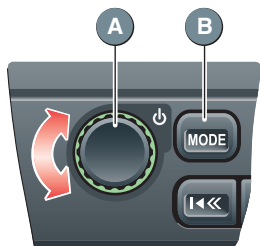

General operation

Press the control knob **A** to switch on/off and rotate to adjust the volume.

 
To adjust the sound settings, press the **MODE** button **B** repeatedly, until the required setting is displayed. Turn the control knob **A** to adjust the level or rating.

After approximately five seconds, the system will return to normal control mode.

Steering wheel controls

1. Press to mute audio unit (Non-Voice only).
2. Rotate as required to increase or decrease volume.
3. Press and release to cycle through Radio, FM, AM, Cassette, CD, MD and CD multichanger.
4. Rotate and release to cycle through preset radio stations, the next CD/MD track or to use cassette AMS (Automatic Music Search).

Rotate and hold for at least two seconds to cycle to the next strongest station, next CD or change cassette side.

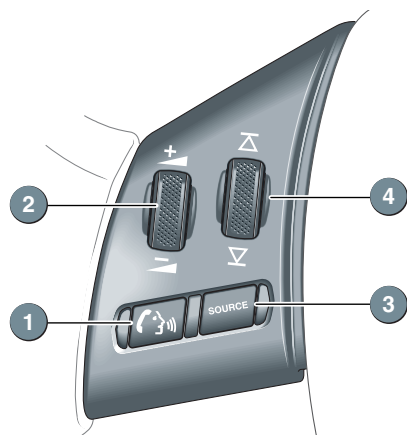

Radio operation

AM/FM To switch on the radio function, press the **AM/FM** button. Pressing this button repeatedly scrolls through FM, MW and LW wavebands.

Seek To search for a radio station, press the **'Seek'** arrow buttons.

Setting the radio presets

Once a radio station has been tuned, press and hold the desired preset button (or touch a station position on touch screen) until a 'beep' is heard. The preset is now stored.

A total of nine presets can be stored for each waveband.

A MEM The radio presets can be automatically set by using the 'Auto Memory' function. Press and hold the **A MEM** button for two seconds. The radio will be briefly muted while it searches the selected waveband for the nine strongest stations.

Activating TA (Traffic announcements)

TA To activate this function, press and release the **TA** button. With TA activated, traffic announcements will interrupt radio, cassette or CD/MD play. To de-activate this feature, press and release the **TA** button again.

Press and hold the **TA** button for two seconds to display the radio station name instead of the frequency.

CD operation

Single CD player

CD If the radio or CD multichanger is being used, pressing the **CD** button will resume playing any CD installed in the player mechanism.

When a CD is loaded into the aperture, it will begin to load and play automatically.

Pressing the **CD** button whilst in CD play mode will pause the current track. A subsequent press of the **CD** button will resume play mode.

Seek To skip tracks, continually press the **'Seek'** arrow buttons to move back or forward accordingly. Pressing and holding these buttons will search through the selected track.

Eject When a disc is inserted, the CD icon is displayed. Press the Disc Eject button to eject the CD. The display will show **DISC EJECT** and the CD icon will be turned off.

CD Multichanger

The CD multichanger is located in the luggage compartment. To load a CD into the multichanger:

1. Slide open the multichanger door, press the **Eject** button and remove the magazine. Close the door.
2. Pull a tray out from the magazine and insert a CD (label side up). Slide tray into magazine until a 'click' is heard.
3. Slide open the multichanger door and ensuring correct orientation, replace the magazine. Ensure the magazine 'clicks' into position.

CD selection

- CDC**
1. Press the **CDC** button (**CD** button on MiniDisc and cassette player systems) to select the CD multichanger mode.
 2. Press preset buttons **1 - 6** to select the appropriate CD loaded in the multichanger.

If a touch-screen is fitted to the vehicle, disc selection can be made by touching the relevant numbered disc icon.

 
3. When playing a CD, press the **CDC** button to pause play. Press again to continue play.

Playing random tracks

MIX To play random tracks from the disc, press and release the **MIX** button. To cancel, press the **MIX** button again.

To play random tracks from all discs loaded in the multichanger, press the **MIX** button for two seconds. To cancel, press and hold the **MIX** button.

Six discs can be loaded into the multichanger unit, and a further single disc in the audio console (when fitted).

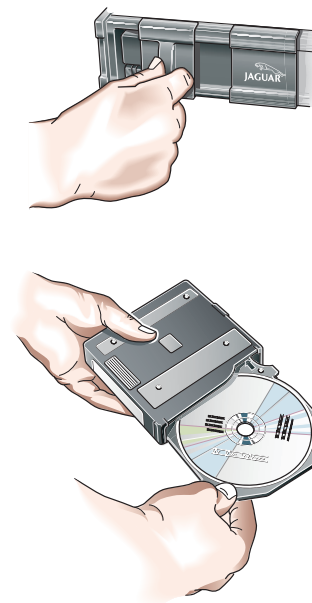

Care point

Remember to close the multichanger door - this will prevent dirt getting into the unit and help reduce skipping.

Navigation

The screen allows touch-control of the navigation system. The screen only requires a light touch to operate the function. Excess pressure on the screen could result in damage. On initial activation, ensure that both the correct country and area have been selected.

Route Preferences should be checked and selected prior to setting a destination. Access via **Nav menu** then **Route Options**.

Setting a destination

 
To set a destination and start using the navigation system, use the following procedure:

1. With the vehicle stationary, press the **NAV** button (arrowed in illustration). When prompted, touch **Agree** on the touch-screen to access the initial map screen.
2. Touch **Nav menu** to access the navigation menu, and then touch **Destination Entry**.
3. Touch either **Address** or **Postcode**.
4. Enter the address or postcode using the on-screen keypad, ensuring a space () is entered in the postcode. Touch **OK** to enter.
5. Touch **Dest** to calculate the route.
6. Once calculated, the screen displays the route. To scroll through alternative routes, touch **Next** on the screen.
7. Touch **Start** to commence navigation. Drive away, following the voice guidance.



Touch the **Audible repeat** icon to hear the last voice instruction again. Audible guidance can be selected/deselected via the **Nav menu**.

When your destination is reached, voice and visual confirmation is given.

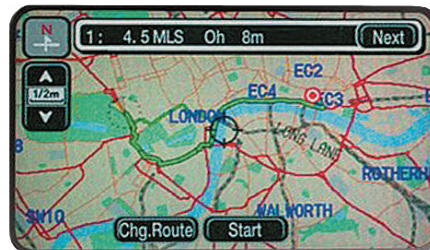

Cancelling guidance

Touch **Nav Menu**, select **Route options**, **Cancel guidance** and touch **Confirm**.

Telephone – Bluetooth system

Mobile phones with Bluetooth capability can communicate with the vehicle's inbuilt telephone system.

The following procedure demonstrates how to connect the most popular brands of mobile phone.

Pairing a handset to the vehicle

1. Turn the starter switch to position **II**.
2. Press the button on the centre console. The touch screen will display the message **No BT phone**. On non-touch screen systems the message **SIG** will be displayed.
3. Either using the on-screen or the audio panel keyboard, press **##3##**, then touch the on-screen icon or press the button on the audio panel.
4. Prepare the handset for pairing to the system.

See the telephone manufacturer's instructions for further details, or follow the table below for generic commands.

	Nokia	Motorola	Ericsson
1	Select Menu	Select Menu	Select Menu
2	Select Settings	Select Settings	Select Connectivity
3	Select Bluetooth OR Connectivity then Bluetooth	Select Connection	Select Bluetooth
4	Select On	Select Bluetooth link	Select My Devices
5	Select Search for audio devices	Select Hands-free	With New Device highlighted, select Add. Press OK to confirm
6	After search, select Jaguar	Select Look for devices	After search, select Jaguar
7	Enter pass code 1313. Press OK to confirm.	After search, select Jaguar	Select Connect
8	No connection? Select Bluetooth (Menu) then Paired devices Jaguar	Permission to bond? Select Yes, and enter pass code 1313	Enter pass code 1313 after prompt

When the handset has been successfully paired to the system, the touch screen message changes to **REGISTERED** or **PHONE CONNECTED**. On non-touch screen systems, the audio system message changes to **SIG ***.

For best results when pairing your handset to the system, ensure the handset is fully charged.

Mobile phone compatibility

There are a number of mobile phones that have been tested to function correctly with the Jaguar system, however not all mobile phones are compatible. For the latest list of compatible phones and software versions, please refer to www.ownerinfo.jaguar.com. Alternatively consult your Dealer/Authorised Repairer.

Downloading phone book entries

1. Turn the starter switch to position **II**, and ensure the handset is paired to the vehicle's system.
2. Press the button.
3. Either using the on-screen keypad or the audio panel keyboard, press **##2##**, then touch the on-screen icon or press the button on the audio panel.
4. Switch off the starter switch for six minutes to allow the system to complete the download process.



Making a call

1. Press and hold the **SOURCE** switch on the steering wheel control, or press on the audio panel. **Phone** will be displayed.
2. Key in the phone number required using the on-screen or audio panel keyboard.
3. Press on the steering wheel control, or on the audio panel. **Calling** will be displayed.
4. To end call, press on the steering wheel control, or on the audio panel.

Receiving a call

To answer or end a call, press on the steering wheel control or on the audio panel.

Filling station information

 
Fuel filler flap

Fuel filler flap location




A small **arrow** on the fuel gauge indicates which **side** the fuel filler flap is located.

Fuel filler flap release

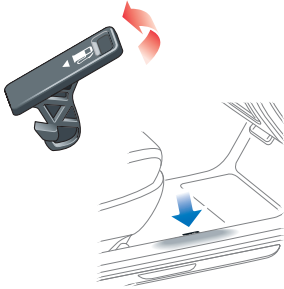

The fuel filler flap release is located on the floor, outboard of the driver's seat.

 Pull the lever to release the fuel filler flap.

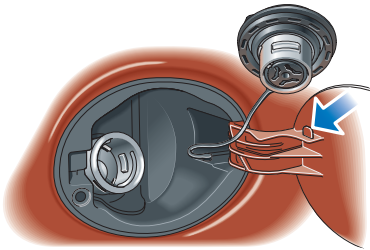

Docking the filler cap

 
The filler cap is secured to vehicle by a strap. For your convenience a hook is provided on the flap to hold the cap whilst refuelling.

Jaguar petrol engines are not suitable for use with fuels containing more than 10 per cent ethanol.

Tyre pressure label

Tyre pressure label

A label showing the correct tyre pressures for your vehicle is attached to the end of the fascia on the driver's side of the vehicle.

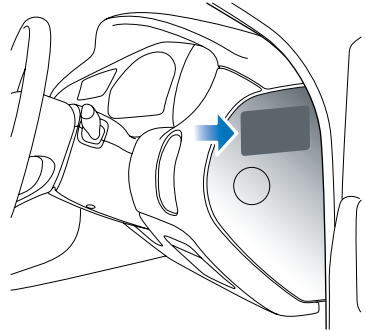

TYRE PRESSURE REMINDER

For your convenience record the tyre pressures specific to your vehicle.

	Front	Rear
Normal Driving		
Laden/ High Speed		